




**Static Line
Packing Instructions**

**Para-Cushion
Back
Model's**

Insert static line ring over the first pin only. Do not route ripcord cable through the static line rings. Using the pull-up cords, firmly pull the top loop of the pilot chute up thru the pack and insert the ripcord pin.

Next pull the center locking loop through and lock in place with center pin.

Now pull the bottom pull-up cord up and expose the loop attached to the bottom left flap of the container. Lock in place with the last pin of the ripcord assembly and gently remove the pull up cords to avoid damaging the locking loops.

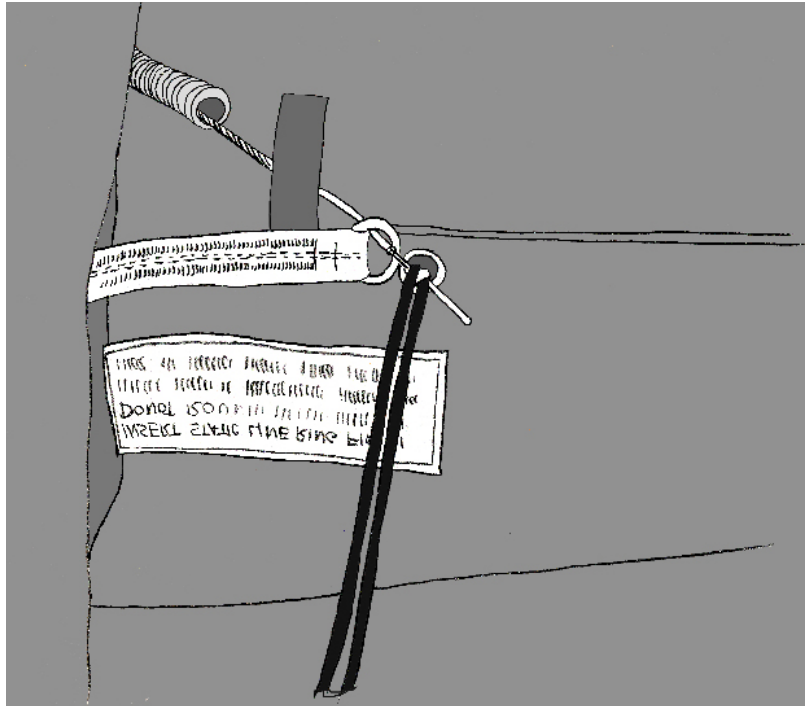

! WARNING !

Do not insert ripcord cable through static line ring.

Stow the static line in the pocket provided on the outside of the container.

Static line should be stowed by alternating from top to bottom stows.

