


Wiring Pinout for Becker AR4201 & AR6201

Connections: D-Sub 25 Pin Female

Battery Ground – 13, 25, Phone (-), PTT
AF Ground – Mic Std (-), Speaker (-)

Position Numbering For
Female - Wiring Side

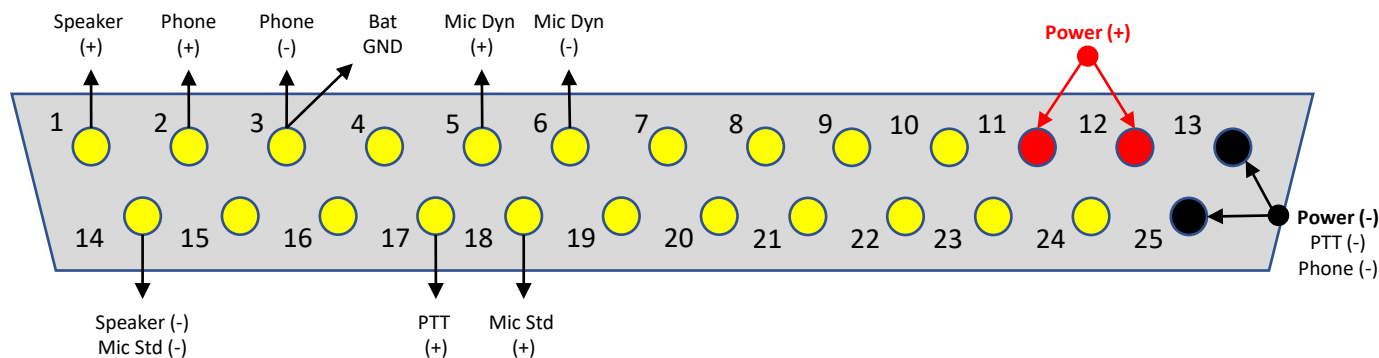

Pin Num.	Wire Function
1	Speaker (+) {14}
2	<u>AF-HI</u> Phone (+) {3}
3	<u>AF-LO</u> Phone (-) {2} [13/25]
4	
5	Mic Dynamic (+) {6}
6	Mic Dynamic (-) {5}
7	
8	


Pin Num.	Wire Function
9	
10	
11	+12Vdc [12]
12	+12Vdc [11]
13	Battery Ground PTT (-) {17} [3/25]
14	<u>AF Ground</u> Mic Std (-) {18} Speaker (-) {1}
15	
16	

Pin Num.	Wire Function
17	PTT Switch {13/25}
18	Mic Standard (+) {14}
19	
20	
21	
22	
23	
24	
25	Battery Ground [3/13]

NOTES – Meanings of Brackets

- (Regular Brackets)
Pin's functional polarity (positive/negative)
- [Square Brackets]
Pin is directly connected to these pin(s)
- {Curly Brackets}
Pin is associated with (n/c to) other pin(s)

AR4201-()

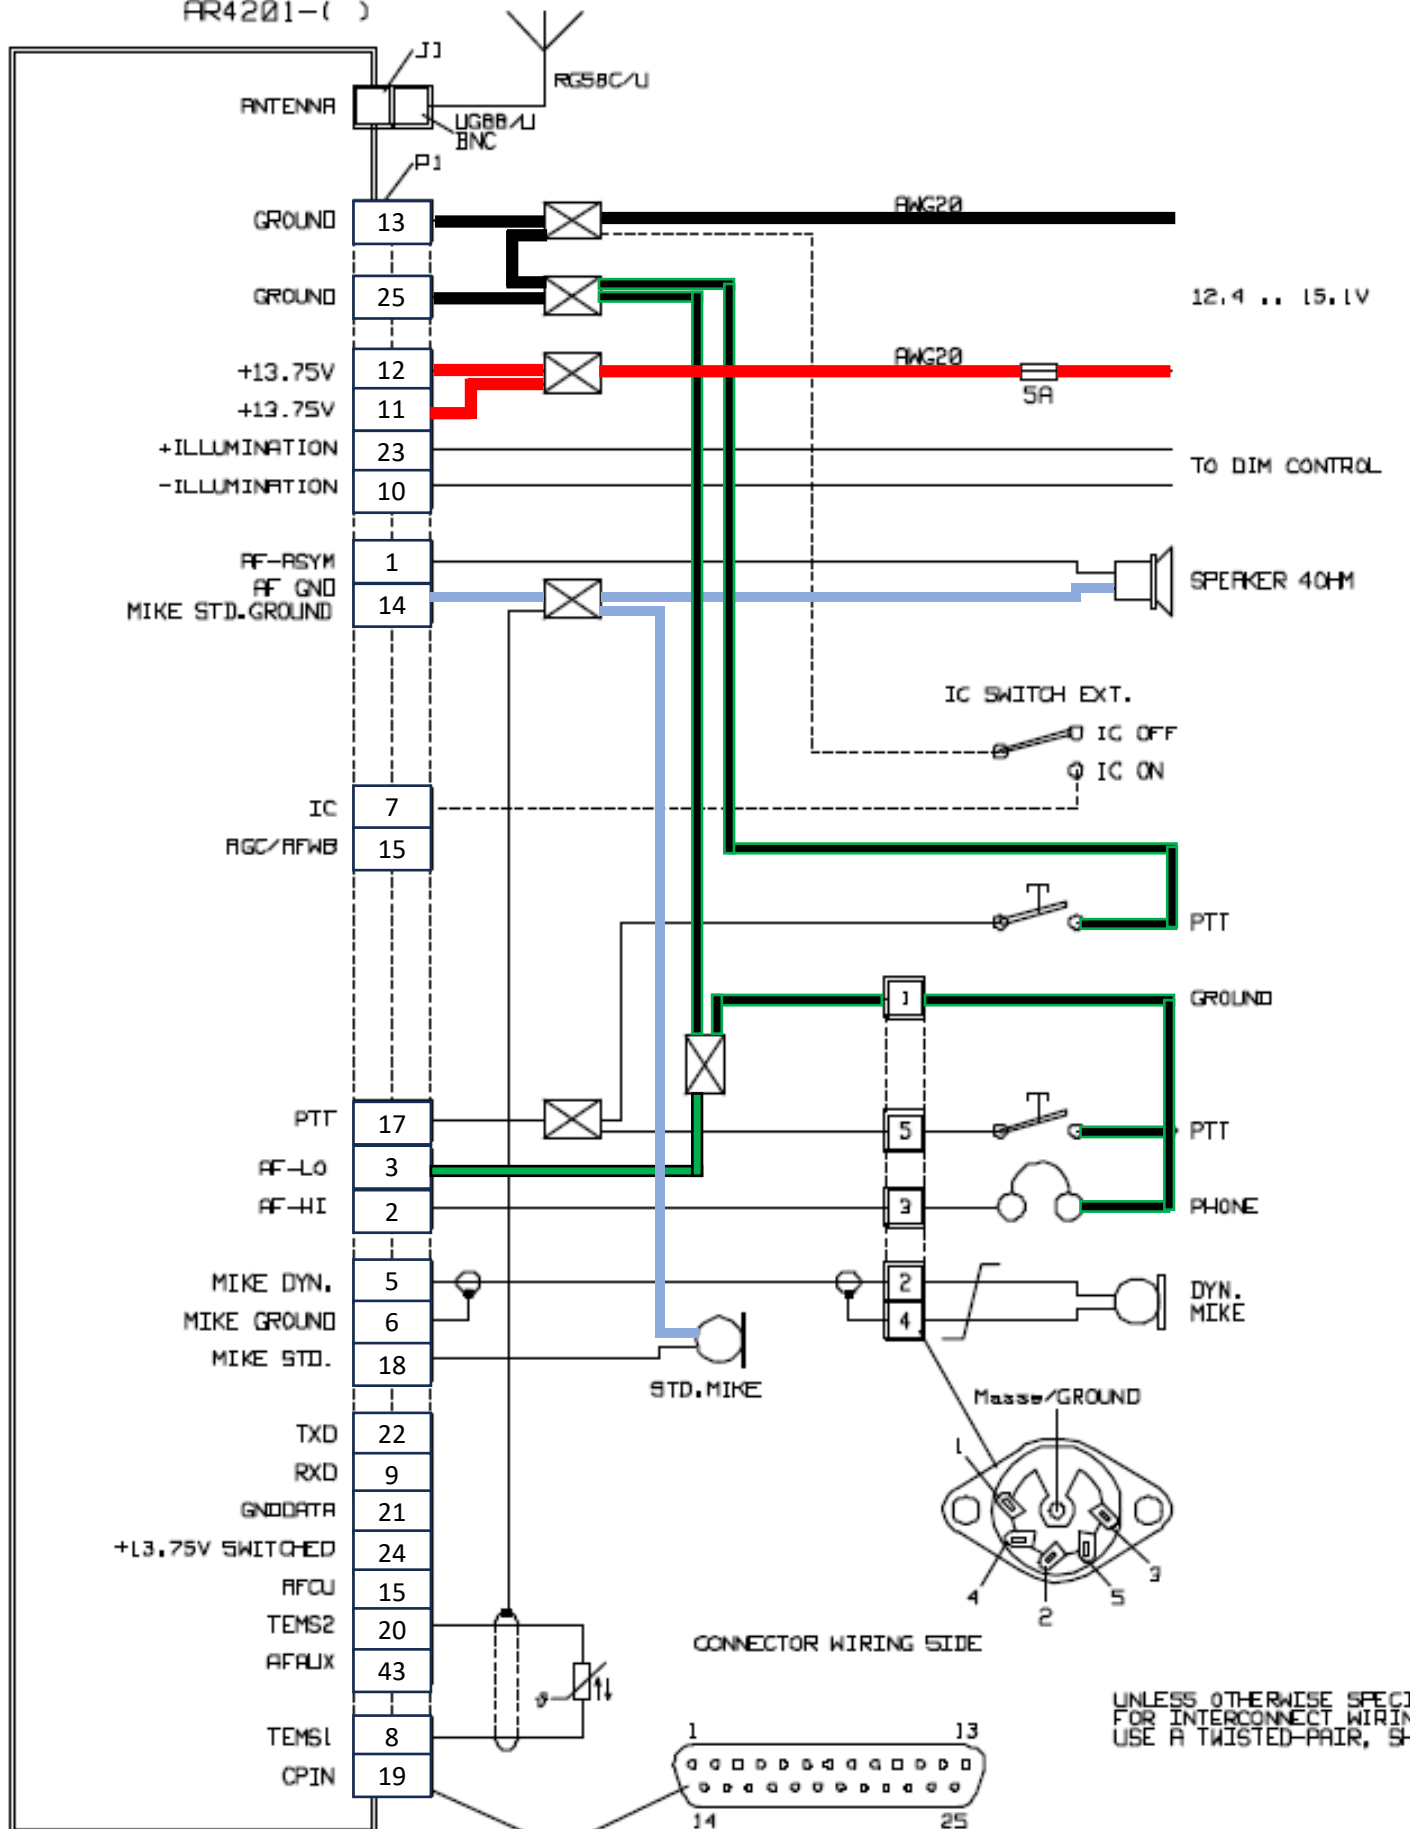

SOURIAU DA255

UNLESS OTHERWISE SPECIFIED
FOR INTERCONNECT WIRING
USE A TWISTED-PAIR, 5-